


Breakfast cabinet 1212 mm dimensions

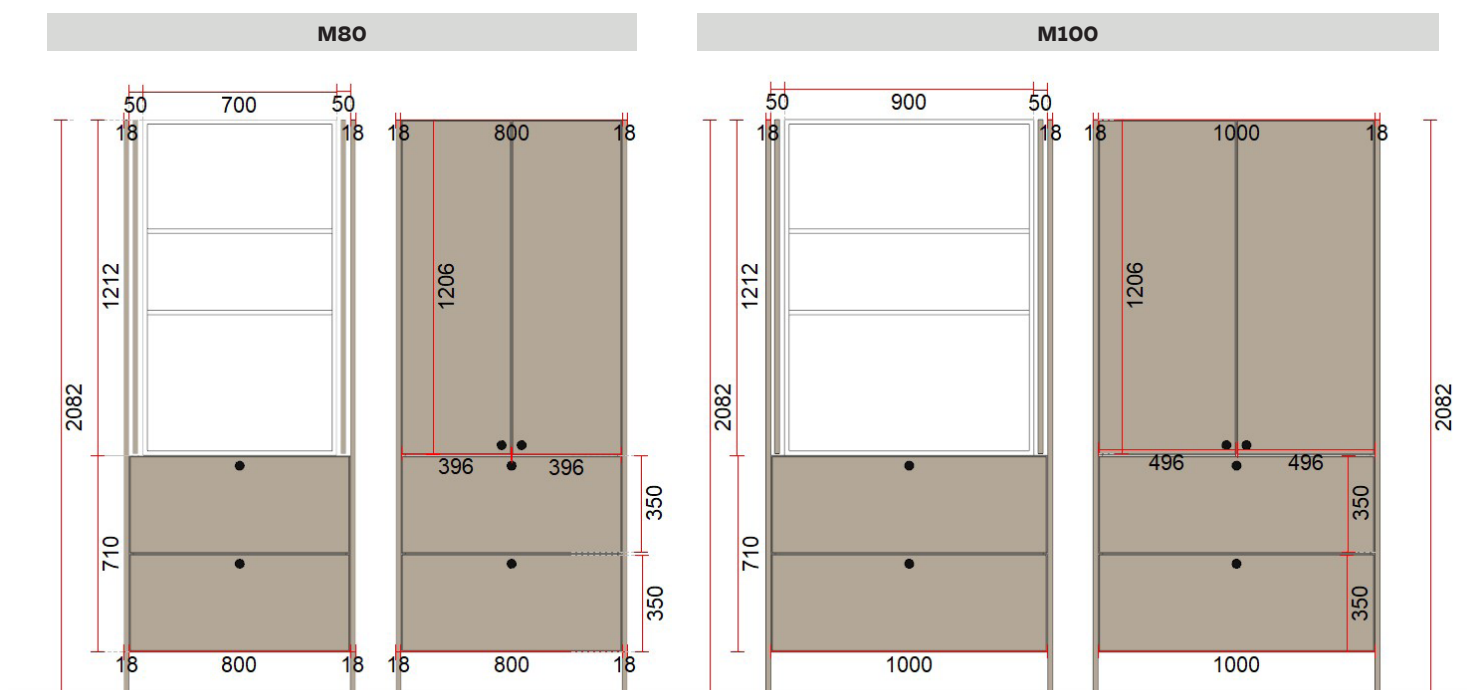

ORDER INSTRUCTION/The needed goods for a ready package:

Cabinet width		M70	M80	M90	M100
TOP	Frame	Code: KRO06 ROLLER-DOOR CABINET M6 1212*600*560	Code: KRO07 ROLLER-DOOR CABINET M7 1212*700*560	Code: KRO08 ROLLER-DOOR CABINET M8 1212*800*560	Code: KRO09 ROLLER-DOOR CABINET M9 1212*900*560
	Door measure	1206*346	1206*396	1206*446	1206*496
	Note! Special measure Drilling 130/8	Note! Special measure Drilling 130/8	Note! Special measure Drilling 130/8	Note! Special measure Drilling 130/8	Note! Special measure Drilling 130/8
BOTTOM	Frame	Code: A07PR L. CABINET 710*700*560	Code: A08PR L. CABINET 710*800*560	Code: A09PR L. CABINET 710*900*560	Code: A10PR L. CABINET 710*1000*560
	Middle panel	Code: B7OVA MIDDLE PANEL 668x539 M70 Drawers and accesories need to be added.	Code: B8OVA MIDDLE PANEL 768x539 M80 Drawers and accesories need to be added.	Code: B9OVA MIDDLE PANEL 868x539 M90 Drawers and accesories need to be added.	Code: B10OVA MIDDLE PANEL 968x539 M100 Drawers and accesories need to be added.
	Door measure	137/278/350*696, 703*346	137/278/350*796, 703*396	137/278/350*896, 703*446	137/278/350*996, 703*496
RAIL SET	Code: AAMIAISKAAP. KISKOT 2 BREAKFAST CABINET RAIL SET 1212 mm HIGH	Code: AAMIAISKAAP. KISKOT 2 BREAKFAST CABINET RAIL SET 1212 mm HIGH	Code: AAMIAISKAAP. KISKOT 2 BREAKFAST CABINET RAIL SET 1212 mm HIGH	Code: AAMIAISKAAP. KISKOT 2 BREAKFAST CABINET RAIL SET 1212 mm HIGH	

The Rail Set 2 includes:

- FOLDING DOOR MACHANISM DZ1319-0055 2 pairs
- FOLDING DOOR MACHANISM KIT DZ1316-0055 2 pairs
- METAL ROD 2 m DZ61040 2 pcs
- BREAKFAST CABINET TEMPLATE / RISER BLOCK 1 set
- HOLE PLUG WHITE Ø36 mm 4 pcs
- PANEL/BEAM 1123x60x16 MEL WHITE 2 pcs
- HINGES SLIDE-ON 107 CO X-P + HINGE PLATE SLIDE-ON KO EUROR. 4 pcs

NOTE !

- We recommend the use of cover panels on both sides of the cabinet
- Breakfast cabinet 1212 mm, is also available as pre-assembled, as shown in picture 21.
Code: AAMIAISKAAPINKASAUS