


---

# **BREAKFAST CABINET ASSEMBLY INSTRUCTIONS**

**CC&Co**

---

## Breakfast cabinet 1922 mm dimensions

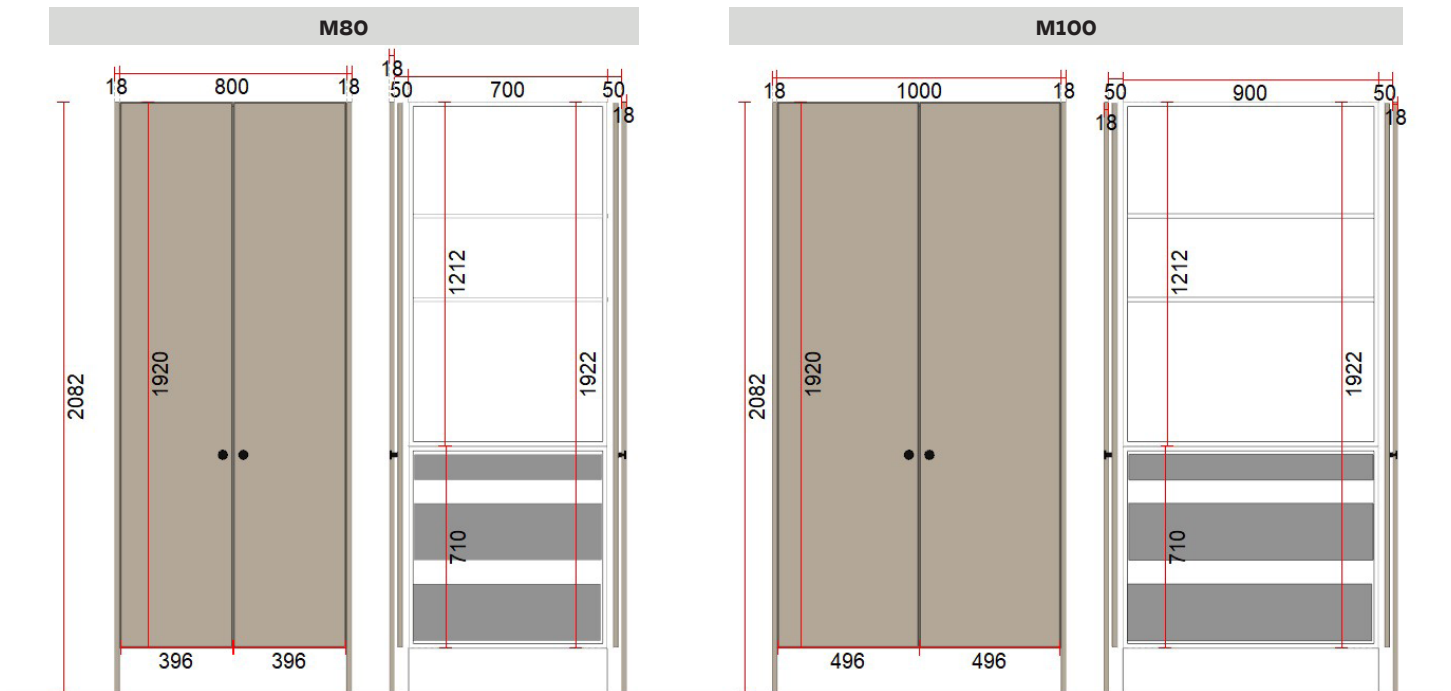

### ORDER INSTRUCTION/The needed goods for a ready package:

| Cabinet width |              | M70  | M80  | M90  | M100   |
|---------------|--------------|--|--|--|--|
| TOP           | Frame        | Code: <b>KRO06</b><br>ROLLER-DOOR CABINET M6<br>1212*600*560                             | Code: <b>KRO07</b><br>ROLLER-DOOR CABINET M7<br>1212*700*560                             | Code: <b>KRO08</b><br>ROLLER-DOOR CABINET M8<br>1212*800*560                             | Code: <b>KRO09</b><br>ROLLER-DOOR CABINET M9<br>1212*900*560                             |
| BOTTOM        | Frame        | Code: <b>A06PR</b><br>L. CABINET 710*600*560<br>Drawers and accesories need to be added. | Code: <b>A07PR</b><br>L. CABINET 710*700*560<br>Drawers and accesories need to be added. | Code: <b>A08PR</b><br>L. CABINET 710*800*560<br>Drawers and accesories need to be added. | Code: <b>A09PR</b><br>L. CABINET 710*900*560<br>Drawers and accesories need to be added. |
| DOORS         | Measure      | <b>1920*346</b><br>Note! Special measure<br>Drilling 130/8 3 hinges (130/8 + middle)     | <b>1920*396</b><br>Drilling 130/8 3 hinges (130/8 + middle)                              | <b>1920*446</b><br>Note! Special measure<br>Drilling 130/8 3 hinges (130/8 + middle)     | <b>1920*496</b><br>Drilling 130/8 3 hinges (130/8 + middle)                              |
|               | * Premium    | <b>100*566 1 pc</b>  | <b>100*666 1 pc</b>  | <b>100*766 1 pc</b>  | <b>100*866 1 pc</b>  |
|               | front panels | <b>195*566 2 pcs</b><br>Note! Special measures   | <b>195*666 2 pcs</b><br>Note! Special measures   | <b>195*766 2 pcs</b><br>Note! Special measures   | <b>195*866 2 pcs</b><br>Note! Special measures   |
| RAIL SET      |              | Code: <b>AAMIAISKAAPPI KISKOT</b><br>BREAKFAST CABINET RAIL SET<br>1922 mm HIGH          | Code: <b>AAMIAISKAAPPI KISKOT</b><br>BREAKFAST CABINET RAIL SET<br>1922 mm HIGH          | Code: <b>AAMIAISKAAPPI KISKOT</b><br>BREAKFAST CABINET RAIL SET<br>1922 mm HIGH          | Code: <b>AAMIAISKAAPPI KISKOT</b><br>BREAKFAST CABINET RAIL SET<br>1922 mm HIGH          |


### The Rail Set includes:

- FOLDING DOOR MACHANISM DZ1319-0055 2 pairs
- FOLDING DOOR MACHANISM KIT DZ1316-0055 2 pairs
- METAL ROD 2 m DZ61040 2 pcs
- BREAKFAST CABINET TEMPLATE / RISER BLOCK 1 set
- HOLE PLUG WHITE Ø36 mm 6 pcs
- PANEL/BEAM 1835x60x16 MEL WHITE 2 pcs
- HINGES OMNIA L 105 CO SLOWMO.HINGE X-P + OMNIA 3D 6 pcs
- MOUNTING PLATE KO EUROSREW 6 pcs
- BREAKFAST CABINETS BRUSH SEAL WITH GLUE 4m 1 pc

**NOTE! We recommend the use of cover panels on both sides of the cabinet.**

\* Premium -front panels, picture on the page 9 (Assemblies ready picture/b)

## Breakfast cabinet 1212 mm dimensions

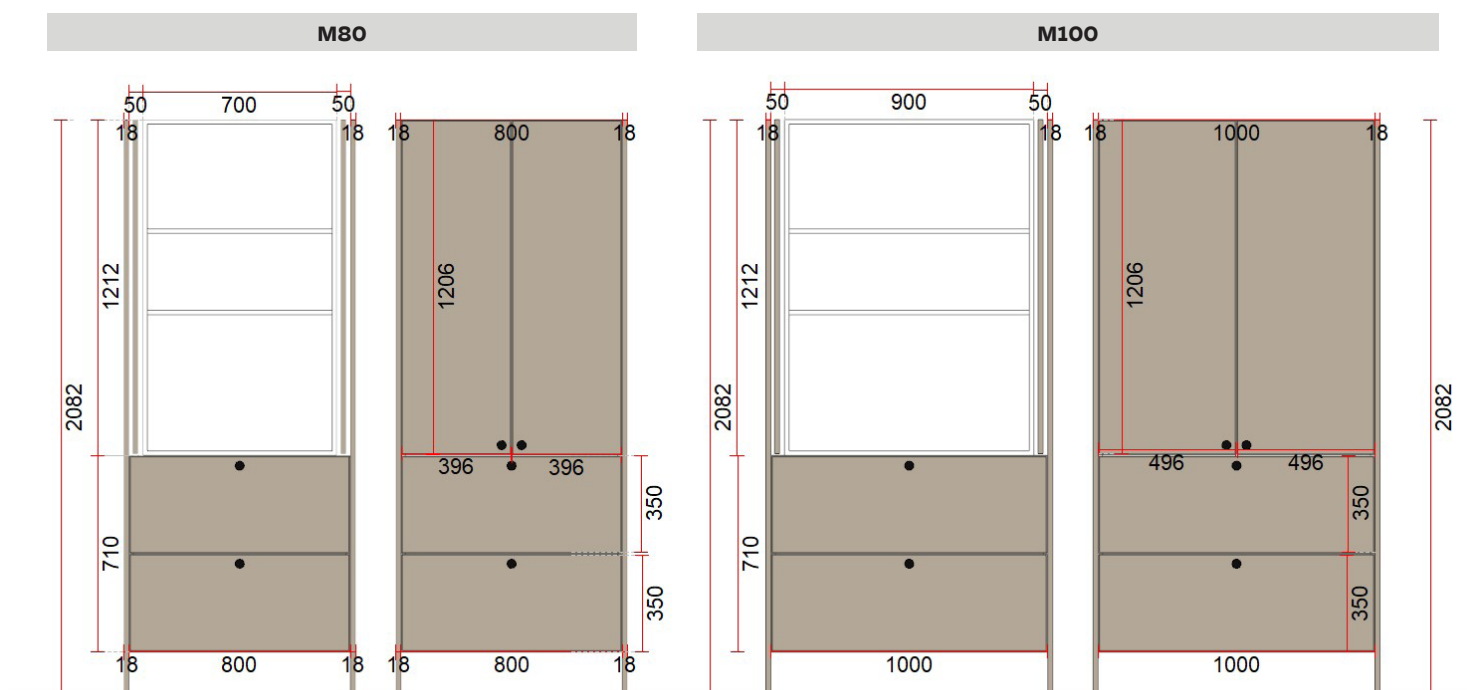

### ORDER INSTRUCTION/The needed goods for a ready package:

| Cabinet width |  | M70   | M80   | M90   | M100  |
|---------------|--|---|---|---|---|
| TOP           | Frame  | Code: KRO06<br>ROLLER-DOOR CABINET M6<br>1212*600*560                               | Code: KRO07<br>ROLLER-DOOR CABINET M7<br>1212*700*560                               | Code: KRO08<br>ROLLER-DOOR CABINET M8<br>1212*800*560                               | Code: KRO09<br>ROLLER-DOOR CABINET M9<br>1212*900*560                                 |
|               | Door measure   | <b>1206*346</b>   | <b>1206*396</b>   | <b>1206*446</b>   | <b>1206*496</b>   |
|               | Note! Special measure<br>Drilling 130/8                                      | Note! Special measure<br>Drilling 130/8   | Note! Special measure<br>Drilling 130/8   | Note! Special measure<br>Drilling 130/8   | Note! Special measure<br>Drilling 130/8   |
| BOTTOM        | Frame  | Code: A07PR<br>L. CABINET 710*700*560   | Code: A08PR<br>L. CABINET 710*800*560   | Code: A09PR<br>L. CABINET 710*900*560   | Code: A10PR<br>L. CABINET 710*1000*560  |
|               | Middle panel   | Code: B7OVA<br>MIDDLE PANEL 668x539 M70<br>Drawers and accesories need to be added. | Code: B8OVA<br>MIDDLE PANEL 768x539 M80<br>Drawers and accesories need to be added. | Code: B9OVA<br>MIDDLE PANEL 868x539 M90<br>Drawers and accesories need to be added. | Code: B10OVA<br>MIDDLE PANEL 968x539 M100<br>Drawers and accesories need to be added. |
|               | Door measure   | <b>137/278/350*696,<br/>703*346</b>   | <b>137/278/350*796,<br/>703*396</b>   | <b>137/278/350*896,<br/>703*446</b>   | <b>137/278/350*996,<br/>703*496</b>   |
| RAIL SET      | Code: AAMIAISKAAP.<br>KISKOT 2<br>BREAKFAST CABINET RAIL SET<br>1212 mm HIGH | Code: AAMIAISKAAP.<br>KISKOT 2<br>BREAKFAST CABINET RAIL SET<br>1212 mm HIGH        | Code: AAMIAISKAAP.<br>KISKOT 2<br>BREAKFAST CABINET RAIL SET<br>1212 mm HIGH        | Code: AAMIAISKAAP.<br>KISKOT 2<br>BREAKFAST CABINET RAIL SET<br>1212 mm HIGH        |   |

### The Rail Set 2 includes:


- FOLDING DOOR MACHANISM DZ1319-0055
- FOLDING DOOR MACHANISM KIT DZ1316-0055
- METAL ROD 2 m DZ61040
- BREAKFAST CABINET TEMPLATE / RISER BLOCK
- HOLE PLUG WHITE Ø36 mm
- PANEL/BEAM 1123x60x16 MEL WHITE
- HINGES OMNIA L 105 CO SLOWMO.HINGE X-P + OMNIA 3D MOUNTING PLATE KO EUROSREW
- BREAKFAST CABINETS BRUSH SEAL WITH GLUE 4m

- 2 pairs
- 2 pairs
- 2 pcs
- 1 set
- 4 pcs
- 2 pcs
- 4 pcs
- 1 pc

### NOTE !

- We recommend the use of cover panels on both sides of the cabinet
- Breakfast cabinet 1212 mm, is also available as pre-assembled, as shown in picture 21.  
Code: AAMIAISKAAPINKASAUS

# 1.

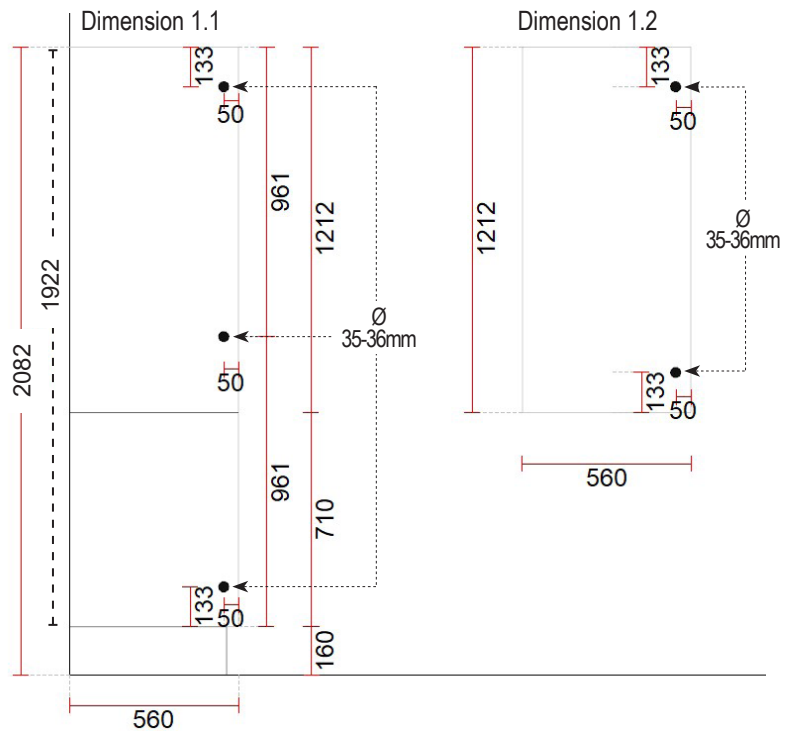

**1. Assemble the cabinet frame and drill adjustment holes for the hinges (diameter 35-35mm). Leave the uppermost shelf unattached.**


- full height cabinet (1922 mm) - see dimension drawing 1.1.
- half height cabinet (1212 mm) - see dimension drawing 1.2.

## 2.



**2. Place the penetration sleeves in position (4-6 pieces).**

## 3.

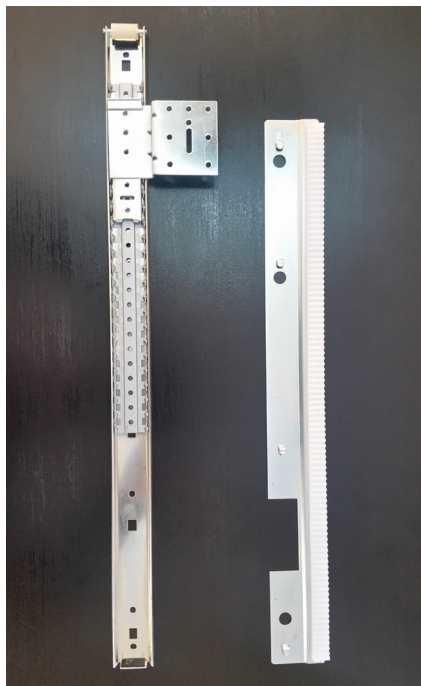

**3. Connect the tooth rail to the main rail (x4). The corner brackets included are unnecessary in this model.**

## 4.



**4. Position the fastening hooks correctly and tap them into place with a hammer.**




5.



5. Rails ready for installation.

6.

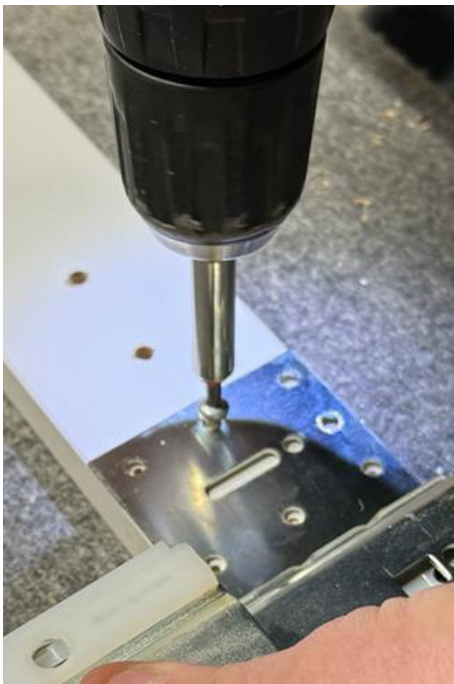

6. Attach the rail to the beam with one screw where the screw markings are ready.

7.



7. Ensure that the rail is at a right angle to the beam and attach the remaining screws.

8.



8. Install the hinge plate in place. Ensure the orientation of the hinge plate from the picture.




9.




9. Install the mounting blocks around the Synchron wheel.

10.

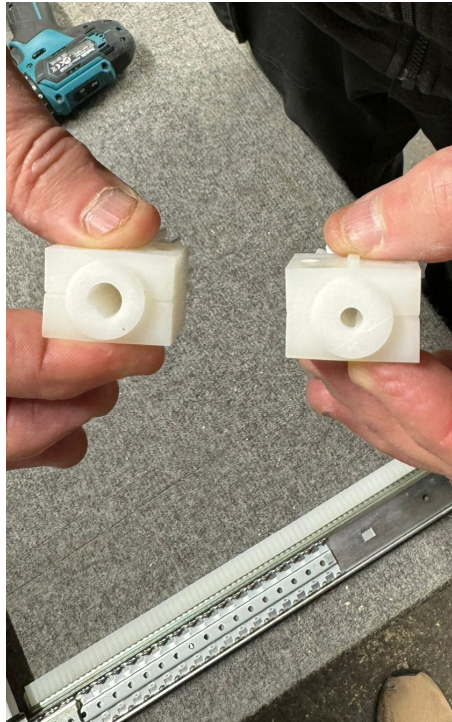

10. The Synchron wheel with a hole on the left side of the image should go to the top of the cabinet.

11.

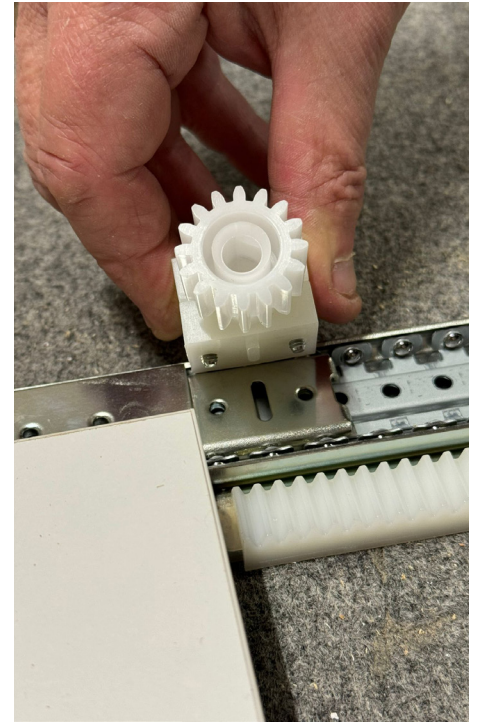

11. Place the Synchron wheel in the designated position on the rail.

12.



12. Attach the Synchron wheel to the rail using the screws provided in the rail package.

13.



13. Cut the metal rod to the correct length:

- for a full-height cabinet (height 1922 mm), the length of the rod = 1890 mm
- for a half-height cabinet (height 1212 mm), the length of the rod = 1180 mm



**14.**



14. Insert the metal rod into place and ensure that the wheels are aligned with each other.

**15.**



15. Attach the central support to the midpoint of the beam.

**16.**



16. Rail package ready.



17.



17. Place the template/riser block between the cabinet front edge and the bottom and top with the floor and ceiling.

18.



18. Drill 2 mm markings for the screws.

19.



19. Align the holes of the riser block and rails with the markings.

20.



20. Attach the riser block and rail to the side of the cabinet with 20 mm wood screws (4 pcs/rail). DO NOT ATTACH THE RAIL FROM THE FIRST HOLE OF THE FRONT EDGE!

21.



21. Rails installed in the cabinet.



**22.**



22. Attach the hinges to the hinge plates.

**23.**



23. Pull out the hinges plate to the outermost position and attach the brush seal along the front edge.

**24.**



24. Finally, attach the doors to the hinges.

## Assemblies ready



a) 1922 mm high Breakfast Cabinet



b) 1922 mm high Breakfast Cabinet with Premium -front panels



c) 1212 mm high Breakfast Cabinet

**Finished Breakfast Cabinet 1212 mm**



**Finished Breakfast Cabinet 1922 mm**

